



DEUTSCH  
ENGLISH  
FRANÇAIS  
NEDERLANDS  
ITALIANO

ESPAÑOL  
SLOVENSKÝ  
POLSKI  
ČEŠTINA

**Hersteller**

Wörlein GmbH  
Gewerbestr. 12  
D 90556 Cadolzburg  
GERMANY

Tel.: +49 9103/71670  
Fax.: +49 9103/716712  
Email: [info@woerlein.com](mailto:info@woerlein.com)  
Web: [www.woerlein.com](http://www.woerlein.com)



## ENVIRONMENTAL PROTECTION



Do not dispose of this product with the normal household waste at the end of its life cycle. Return it to a collection point for the recycling of electrical and electronic devices. This is indicated by the symbol on the product, user manual or packaging

The materials are reusable according to their markings. By reusing, recycling or other forms of utilization of old devices you make an important contribution to the protection of our environment.

Please contact your local authorities for details about collection points.

 
	<b>WARNING</b> Risk of electric shock Do not open!	
Caution: To reduce the risk of electric shock, do not remove the cover (or back). There are no user serviceable parts inside. Refer servicing to qualified service personnel.		



**This symbol indicates the presence of dangerous voltage inside the enclosure, sufficient enough to cause electric shock.**



This symbol indicates the presence of important operating and maintenance instructions for the device



Used batteries are hazardous waste and NOT to be disposed of with the household waste! As a consumer you are legally obligated to return all batteries for environmentally responsible recycling – no matter whether or not the batteries contain harmful substances\*)

Return batteries free of charge to public collection points in your community or shops selling batteries of the respective kind.


Only return fully discharged batteries


\*) marked Cd = cadmium, Hg = mercury, Pb = lead

- Only use mercury and cadmium-free batteries.
- Used batteries are hazardous waste and NOT to be disposed of with the household waste!!!
- Keep batteries away from children. Children might swallow batteries.
- Contact a physician immediately if a battery was swallowed.
- Check your batteries regularly to avoid battery leakage.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- CAUTION: Danger of explosion if battery is incorrectly replaced
- Replace only with the same or equivalent type
- Use the device in dry indoor environments only.
- Protect the device from humidity.
- This apparatus is for moderate climates areas use, not suitable for use in tropical climates countries.

- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- The mains plug or an appliance coupler is used as the disconnect device, the disconnect devices shall remain readily operable.
- Connect this device to a properly installed and earthed wall outlet only. Make sure the mains voltage corresponds with the specifications on the rating plate.
- Make sure the mains cable stays dry during operation. Do not pinch or damage the mains cable in any way.
- A damaged mains cable or plug must immediately be replaced by an authorized service center.
- In case of lightning, immediately disconnect the device from the mains supply.
- Children should be supervised by parents when using the device.
- Clean the device with a dry cloth only.
- Do NOT use CLEANING AGENTS or ABRASIVE CLOTHS!
- Do not expose the device to direct sunlight or other heat sources.
- Install the device at a location with sufficient ventilation in order to prevent heat accumulation.
- Do not cover the ventilation openings!
- Install the device at a safe and vibration-free location.
- Install the device as far away as possible from computers and microwave units; otherwise radio reception may be disturbed.
- Do not open or repair the enclosure. It is not safe to do so and will void your warranty. Repairs only by authorized service/ customer center.
- No naked flame sources, such as lighted candles, should be placed on the unit.
- When you are necessary to ship the unit store it in its original package. Save the package for this purpose.
- In case of malfunction due to electrostatic discharge or fast transient (burst), remove and reconnect the power supply.
- If the unit is not using for a long period of time, disconnect it from the power supply by unplugging the power plug. This is to avoid the risk of fire.

## LOCATIONS OF CONTROLS

1. Mode/Standby  Button
2. Alarm/Sleep Button
3. Set/Mem Button
4. Snooze/Dimmer Button
5. Vol Button
6. Down button
7. Up Button
8. Qi (Wireless Charging) location
9. Speakers
10. AL1 indicator
11. AL2 indicator
12. PM indicator
13. Qi (Wireless Charging) indicator
14. White LED
15. Sleep indicator
16. Aux in indicator
17. FM indicator
18. FM antenna
19. Aux in (LINE) jack
20. USB charge slot
21. DC 5V jack
22. Battery door

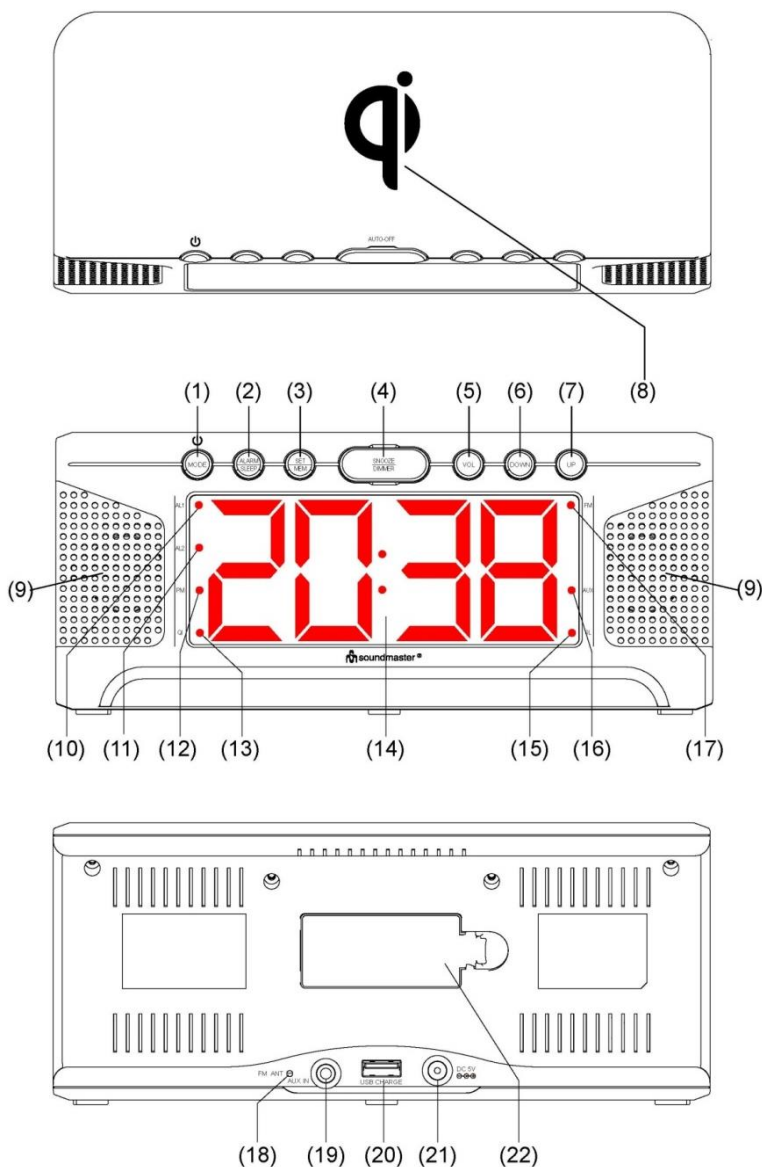

## GETTING STARTED

### Connecting to power

1. Connect the cord of the power adapter to the “DC IN” jack of the radio.
2. Connect the plug of the power adapter to a wall socket.

The radio is powered and in standby mode when you see the display is switched on.


### BACKUP SYSTEM

- The radio is equipped with a backup system. It requires 2x 1.5 V AAA batteries. Insert the batteries into the battery compartment and make sure the positive and negative (+ or -) sides of the battery are in contact with the corresponding terminals in the battery compartment.
- If a power cut occurs, the radio automatically switches to the battery power supply and keeps the clock and timer settings.
- When replacing the battery, do not disconnect the power adapter. Otherwise, all clock and alarm settings will be lost.

## TIME SET

1. Under the clock mode, press the “**SET**” button, the 2 digits for “**HR**” will be blinking, and you can press “**UP**” or “**DOWN**” button to adjust the hours
2. Press the “**SET**” button again, the 2 digits for “**MIN**” will be blinking, and you can press “**UP**” or “**DOWN**” button to adjust the minutes
3. Press the “**SET**” button the 3<sup>rd</sup> time to set the 24HR or 12HR, the default set is 24HR, and you can press “**UP**” or “**DOWN**” button to set 12HR or 24HR
4. Press the “**SET**” button the 4<sup>th</sup> time to set the snooze time, such as “05” means snooze 5 minutes and you can press “**UP**” or “**DOWN**” button to set your desired snooze time
5. Press the “**SET**” button the 5<sup>th</sup> time to revert to clock mode

### MODE/ STANDBY BUTTON

You can press “**MODE/ **” button to switch the function from FM/LINE/OFF

You can also press and hold the “**MODE/ **” button to switch the unit OFF.

### VOL BUTTON

Under FM/LINE mode, press the “**VOL**” button, “L10” is the default volume level, and you can press “**UP**” or “**DOWN**” button to adjust to your desired volume level

Total 15 volume levels

## RADIO OPERATION

Press the “**MODE**” button to switch the radio on.

Press “**UP**” or “**DOWN**” button to adjust the frequency.

Press and hold the “**UP**” or “**DOWN**” button to automatically tune to the next available FM station.

### MEMORY THE STATIONS

Under FM mode, select your desired FM station, then pressing and holding the “**MEM**” button for more than 3 seconds, at this time “01” will be blinking and you can press “**UP**” or “**DOWN**” button to select the storage station no., then press “**MEM**” button to confirm this action

You can store a total of 20 FM stations

### RECALL THE STATIONS

Under FM mode, press “**MEM**” button to obtain the stored FM stations, and you can press “**MEM**” button continually to obtain the stations from “01-20”

## ALARM FUNCTION

### ALARM SET

1. Switch the unit in the standby mode.
2. Press the “**ALARM**” button, then enter into ALARM 1 mode, the 2 digits for “**HOUR**” will be blinking, and you can press “**UP**” or “**DOWN**” button to set the hours
3. Press the “**ALARM**” button again, the 2 digits for “**MIN**” will be blinking, and you can press “**UP**” or “**DOWN**” button to set the minutes
4. Press the “**ALARM**” button the 3<sup>rd</sup> time into ALARM 1 alarm ring mode, and you can press “**UP**” or “**DOWN**” button to select alarm ON=BUZZER/FM/AUX or turn OFF the alarm
5. Press the “**ALARM**” button the 4<sup>th</sup> time, then enter into ALARM 2 mode, the 2 digits for “**HOUR**” will be blinking, and you can press “**UP**” or “**DOWN**” button to set the hours
6. Press the “**ALARM**” button the 5<sup>th</sup> time, the 2 digits for “**MIN**” will be blinking, and you can press “**UP**” or “**DOWN**” button to set the minutes
7. Press the “**ALARM**” button the 6<sup>th</sup> time into ALARM 2 alarm ring mode, and you can press “**UP**” or “**DOWN**” button to select alarm ON=BUZZER/FM/AUX or turn OFF the alarm

## SNOOZE

Under the alarm ring mode, you can press “**SNOOZE**” button into snooze waiting time

## SLEEP

Under FM/LINE mode, pressing and holding the “**SLEEP**” button for more than 3 seconds, the 2 digits for sleep minutes will be blinking, and then you can press sleep button continually to select the sleep time from “05-15-30-45-60-75-90-00”

Remark: If you already opened the sleep function, you can check the remaining sleep time by long pressing the sleep button for the first time

## DIMMER

Except the alarm ring mode, you can press “DIMMER” button to set the dimmer level, total 2 dimmer levels

### AUTO-OFF DISPLAY

When powered on, the default dimmer level is high, you can press the dimmer button convert to low level

Press and hold the “DIMMER” button for more than 3 seconds, the LED will power off. At this time you can press any button to light up the LED screen to high dimmer, and after 10 seconds the LED screen will extinguish.

Press and hold the “DIMMER” button for more than 3 seconds again; the LED screen will blinking, then the auto-stop display function disappeared

## WIRELESS (QI)CHARGING

You can put the smartphone (which have the built-in wireless charging chips) on the top of the unit, and then the smartphone will be charging. When QI charging, the white LED for QI will on, after full charged LED off

## CHARGING EXTERNAL DEVICE

Connect an external device (e.g. smartphone, mp3 player) via a USB cable (not provided) to the USB jack on the back of the radio for charging. The radio cannot access the contents in the connected external device.

### Remark:

Please only use one charging device, either wireless charging or USB charging port. Do not use together.

## TECHNICAL SPECIFICATIONS

Tuner Range:	FM: 87.5 – 108 MHz
Number of preset radio stations:	20
AC power adaptor:	Input: AC 100-240 V, 50/60Hz 0.5A Output: DC 5 V $\overline{\text{---}}$ 2000mA $\ominus$ — $\oplus$

Features and specifications are subject to change without prior notice.


## IMPORTER

Wörlein GmbH	Tel.:	+49 9103 71 67 0
Gewerbestr. 12	Fax.:	+49 9103 71 67 12
D 90556 Cadolzburg	Email:	<a href="mailto:service@woerlein.com">service@woerlein.com</a>
Germany	Web:	<a href="http://www.woerlein.com">www.woerlein.com</a>

Technische Änderungen und Druckfehler vorbehalten

Copyright by Woerlein GmbH, 90556 Cadolzburg, [www.woerlein.com](http://www.woerlein.com)

Vervielfältigung nur mit ausdrücklicher Genehmigung der Woerlein GmbH

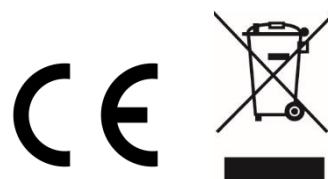

Hiermit bestätigt Wörlein GmbH, dass sich dieses Gerät in Übereinstimmung mit den grundlegenden Anforderungen und den übrigen einschlägigen Bestimmungen der Richtlinie 2014/53/EU befindet.

Eine Kopie der Konformitätserklärung kann unter folgender Adresse bezogen werden.  
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germany  
Email: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0

Hereby, Wörlein GmbH declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

A copy of the Declaration of Conformity may be obtained at the following location:  
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germany  
Email: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0

Par la présente, Wörlein GmbH déclare que cet appareil est conforme aux exigences principales et autres clauses applicables de la Directive 2014/53/EU.

Vous pouvez demander de recevoir une copie de la déclaration de conformité en écrivant à l'adresse suivante :  
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germany  
Email: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0

Wörlein GmbH verklaart hierbij dat dit apparaat in overeenkomst is met de essentiële vereisten en andere relevante bepalingen van de Richtlijn 2014/53/EU.

Er kan een kopie van de Conformiteitsverklaring worden verkregen op de volgende locatie:  
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germany  
Email: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0

Con la presente, Wörlein GmbH dichiara che questo dispositivo è conforme ai requisiti essenziali e altre disposizioni contenute nella Direttiva 2014/53/EU.

Una copia della Dichiarazione di conformità è disponibile al seguente indirizzo:  
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Germania  
Email: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0

Härmed Wörlein GmbH deklarerar att denna enhet är i överensstämmelse med de grundläggande kraven och andra relevanta bestämmelser i direktiv 2014/53/EU.

En kopia av försäkran om överensstämmelse kan erhållas på följande plats:  
Wörlein GmbH, Gewerbestrasse 12, D 90.556 Cadolzburg, Tyskland  
E-post: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0

Herved Wörlein GmbH erklærer, at denne enhed er i overensstemmelse med de væsentlige krav og øvrige relevante krav i direktiv 2014/53/EU.

En kopi af Overensstemmelseserklæringen kan fås på følgende placering:  
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Tyskland  
E-mail: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0

Tímto Wörlein GmbH prohlašuje, že toto zařízení je ve shodě se základními požadavky a dalšími příslušnými ustanoveními směrnice 2014/53/EU.

Kopii Prohlášení o shodě lze získat v následujícím umístění:  
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Německo  
E-mail: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0

Por este meio, Wörlein GmbH declara que este dispositivo está em conformidade com os requisitos essenciais e outras disposições da Directiva 2014/53/EU.

Uma cópia da Declaração de Conformidade pode ser obtida no seguinte local:  
Wörlein GmbH, Gewerbestrasse 12, D 90556 Cadolzburg, Alemanha  
Email: [info@woerlein.com](mailto:info@woerlein.com)  
Tel.: +49 9103 71 67 0